

CELOP Smart Classrooms: 271, 273

A Quick Guide

Component controls—please DO NOT TOUCH any other buttons!

ver: 1/08

Tuner

- Power—turn on
- Input selector—choose input device
- Volume—adjust after input device set up

DVD/CD player

- Power—turn on
- Eject

VCR

- Power—turn on
- Eject

Audio cassette deck

- Power—turn on
- Playhead controls (play, stop, FF, R)



Smart Classroom Media Cabinet

Use remotes on door to control DVD player, VCR, projector, and closed captions device

To Use

Tuner

1. Turn on
2. Select input device with **Input Selector**
 - DVD = "DVD"
 - VCR = "Video 2"
 - Laptop = "AUX"
 - Audio cassette = "MD/TAPE"

Projector

3. Turn on (with remote)
4. Press correct input button (on remote)
 - Computer: press **Comp** button
 - VCR, DVD: press **S-Video** button

Input device (DVD, VCR, audio cassette)

5. Turn on
6. Insert media
7. Press Play on remote

Laptop/iPod

- 5b. Connect VGA cable to laptop (Macs need adaptor)
- 6b. Connect audio cable to laptop or iPod

Network

Use "CELOP" WiFi (no cable), password = *celopwifi*

Captions

For DVDs, use the disk menu to turn subtitles on:

Press **Subtitles** button on remote or

Press **Menu** button > Audio setup > Subtitles

For VHS, use closed captioning box

Using CC Decoder remote

Press **Menu**

Press **4** (Closed captioning)

Press **2** (CC 1)

Press **Menu** (to exit)

